






 

 







 

 

 











 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Play		Play
	Pause/Step		Pause
	Stop		Stop
	Scan >>		>>
	<< Scan		<<
	Skip >>I		>>I

Originalfernbedienung Ersatzfernbedienung

	I<< Skip		I<<
	AV/Input		AV
	CH List/DVD Menu		Menu
	Setup		Options
	Mode		Media
	Return		Back
	Display		Shift + Info
	Text		Text
	EPG		Guide
	[=i]/Index/Zoom		Info
	Red/Repeat		Red
	Green/A-B		Green
	Yellow/Program		Yellow
	Blue/Clear		Blue
	O)/)/Audio		Dual
	[...]/Subtitle		Subt
	Camera/Angle		Format



**Originalfernbedienung Ersatzfernbedienung**

	Resolution		3D
	Enter		Ok
	Up/CH+		Up
	Down/CH-		Down
	Right/FAV+		Right
	Left/FAV-		Left
	[.≡]/Mix/Title		TV/R
	Open/Close		Eject
	Power Tv	+	Shift + Power
	PR/CH+ Tv		Ch +
	PR/CH- Tv		Ch -
	Vol+ Tv		Vol +
	Vol- Tv		Vol -

Originalfernbedienung Ersatzfernbedienung

