
 



 
 


 
 
 


 

 


 






 




 




**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Lang		Dual
	Recall		Pre Ch
	Tv/Radio		TV/R
	Dev.List		List
	Info		Info

**Originalfernbedienung Ersatzfernbedienung**

	FAV		Shift + Pre Ch
	Menu		Menu
	Exit		Exit
	Text		Text
	EPG		Guide
	Up/CH+		Up
	Down/CH-		Down
	Right		Right
	Left		Left
	Enter		Ok
	Vol+		Vol +
	Vol-		Vol -
	<<		<<
	>>		>>
	Stop		Stop
	Play		Play
	Rec		Rec



