 


 










 

 







Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Mute		Mute
	PVR Rec		Rec
	PVR List		Smart
	EPG		Guide
	Info		Info
	TTX		Text
	Subtitle		Subt
	Audio		Dual
	DTV/VCR		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7

Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	0		0
	Menu		Menu
	EXit		Exit
	Favourite		Pre Ch
	Tv/Radio		TV/R
	OK		Ok
	Up		Up
	CH+		Ch +
	CH-		Ch -
	Down		Down
	Left		Left
	Vol-		Vol -
	Right		Right
	Vol+		Vol +
	Recall		Format





Originalfernbedienung Ersatzfernbedienung

	Goto		Media
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	I<</Prev		I<<
	>>I/Next		>>I
	Repeat	+	Shift + Text
	<</Rev		<<
	>>/Fwd		>>
	Play		Play
	Stop		Stop
	Pause		Pause

Originalfernbedienung Ersatzfernbedienung

