 




 

 
 
 
 
 
 


 

 
 
 
 
 
 



 
 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Eject		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu/PgDn		Menu
	Title/PgUp		Info
	Setup		Options
	Return		Back
	Enter		Ok

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	CH+		Ch +
	CH-		Ch -
	Down		Down
	Left		Left
	Right		Right
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	EPG/P/N		Guide
	Exit/Slow		Exit
	Tv/Radio		TV/R
	TTX		Text
	Audio		Dual
	Subtitle		Subt
	Play		Play
	Pause		Pause



