



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10+		Shift + Guide
	EPG		Guide
	Goto		Smart
	Favorite		Pre Ch
	Menu		Menu

Originalfernbedienung Ersatzfernbedienung

	Title/TTX		Text
	Mute		Mute
	Info		Info
	Vol-		Vol -
	Vol+		Vol +
	Play		Play
	Pause		Pause
	Stop		Stop
	Setup		Options
	Source		AV
	Tv/Radio		TV/R
	Return		Back
	Enter		Ok
	Up		Up
	CH+		Ch +
	CH-		Ch -
	Down		Down





Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Left		Left
	<<		<<
	>>		>>
	l<<		l<<
	>>l		>>l
	Subtitle		Subt
	Zoom	+	Shift + Eject
	Language		Dual
	PBC		Format
	Program		Sleep
	L/R		Exit
	Video	+	Shift + Smart
	P/N		Media
	Red/Repeat		Red
	Green/A-B		Green
	Yellow/Angle		Yellow

Originalfernbedienung Ersatzfernbedienung

	Blue/Slow		Blue
--	-----------	--	------

