
 

 










 
 

 


 














 
 
 
 
 

 
 
 
 
 
 

 








 
 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TTX/MIX		Text
	PRE-CH		Pre Ch
	Mute		Mute
	CH.List		List
	Vol+		Vol +

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol -
	PR+		Ch +
	PR-		Ch -
	Menu		Menu
	Tools		Options
	Guide		Guide
	Info		Info
	Exit		Exit
	Return		Back
	Media.P		Media
	Enter		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Red		Red
	Green		Green





**Originalfernbedienung Ersatzfernbedienung**

	Yellow		Yellow
	Blue		Blue
	PIP		Format
	AD/Subt.		Subt
	Ball		TV/R
	Stop		Stop
	Play		Play
	<<		<<
	>>		>>
	Pause		Pause

**Originalfernbedienung Ersatzfernbedienung**