 
 

 












Originalfernbedienung Ersatzfernbedienung

	On/Standby		Power
	Open/Close		Eject
	CD		Yellow
	Play		Play
	Tuner		Green
	Aux		Red
	Pause		Pause
	Sleep		Sleep
	Stop/Band		Stop
	I<</Tuning-		I<<
	>>/Tuning+		>>I
	<< Search		<<
	>> Search		>>
	Vol+		Vol +
	Vol-		Vol -
	Enter/Memo		Ok
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Down		Down
	Right		Right
	Left		Left
	Menu/Set		Menu
	Mute		Mute
	Play/Pause iPod		Blue
	Remote iPod		3D
	Dimmer		Media
	Time/Display		Info
	Clock		Shift + AV
	Folder Mode		TV/R
	SDB/Tone		Dual
	1		1
	2		2
	3		3
	4		4
	5		5





Originalfernbedienung Ersatzfernbedienung

6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0/10	0/10	0	0
+10	+10	GUIDE	Guide
PROG / DIR	Prog/Dir	REPEAT TEXT	Text
RANDOM	Random	AD SUBT	Subt
REP 1 / ALL	Rep 1/All	RETURN BACK	Back
CLEAR	Clear	CLEAR EXIT	Exit
CALL	Call	FAV PRE-CH	Pre Ch
PTY	PTY	TIMER AV	AV
DAB / XM / RDS	DAB/XM/RDS	PICTURE FORMAT	Format
I<<	I<< iPod	CH -	Ch -
I>>	I>> iPod	+ CH	Ch +
PLIST DOWN	P.List Down iPod	SHIFT + 	Shift + Down
PLIST UP	P.List Up iPod	SHIFT + 	Shift + Up

Originalfernbedienung Ersatzfernbedienung

