

 
 



 








 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV / Input / RDS
	HDMI		Shift + 0
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TTX/MIX		Text / Goto
	0		0
	PRE-CH		Fav / Marker / PC
	Vol+		Vol+
	Mute		Mute / Dimmer

 

 





 






 
 










Originalfernbedienung Ersatzfernbedienung

	P+		CH+ / Page+
	Vol-		Vol-
	CH.List		Smart / List
	P-		CH- / Page-
	Media.P		Display / Media
	Menu		Menu / Home
	Guide		Guide / EPG / -/-
	Tools		Setup / OPT /
	Up		Up
	Info		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Return		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search





**Originalfernbedienung    Ersatzfernbedienung**

	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Dual/I-II		Shift + Audio / Lang I/II
	AD		Audio / Lang I/II
	P.Size		Zoom / Size
	Subt.		Subtitle / EQ
	<<		<< / Tune-
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Stop		Stop / Hold

**Originalfernbedienung    Ersatzfernbedienung**