








 





 


 
 



 
 

 

 
 







Originalfernbedienung Ersatzfernbedienung

	On/Standby		Power
	Vol-		Vol -
	Vol+		Vol +
	CD		Red
	Tuner/Band		Green
	Tape (1-2)		Yellow
	Video/AUX		Blue
	Equalizer Mode		Dual
	X-Bass		Subt
	Play/Back CD		Play
	Stop CD		Stop
	Pause CD		Pause
	<</I<< CD		I<<
	>>/I>> CD		>>I
	Clear CD		Exit
	Random CD		Media
	Disc Skip CD		Smart

Originalfernbedienung Ersatzfernbedienung

	Preset Down		Ch -
	Preset Up Tuner		Ch +
	<< Tape2		<<
	>> Tape2		>>
	Play 1 Tape		Left
	Stop 1 Tape		Ok
	Play Tape2		Right
	Rec/Pause		Down
	Disc 1 CD		1
	Disc 2 D		2
	Disc 3 CD		3
	Memory CD		Menu

