


 

 


 

 

 

 

 

 



 
 


 

 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Info		Info
	Angle		Back
	Copy		Sleep
	Zoom		Eject
	Tv Sys		TV/R
	Music		Shift + Menu
	Setup		Options
	Menu		Menu
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7

Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	0		0
	Time Shift		Guide
	Goto		Pre Ch
	Rec		Rec
	Stop		Stop
	<</FR		<<
	>>/FF		>>
	Play/Pause		Play
	>>I/Next		>>I
	Subtitle		Subt
	Audio		Dual
	I<</Prev		I<<
	A-B		Shift + Play
	Repeat		Text
	Vol+		Vol +





Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol -
	Home		Smart
	X/Return		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Wuaki TV		AV
	Select		List
	Red		Red
	Grenn/EPG		Green
	Yellow/TTX		Yellow
	Blue		Blue

Originalfernbedienung Ersatzfernbedienung

