



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Eject		Eject / Surround
	Subtitle		Subtitle / EQ
	1		1
	2		2
	3		3
	Angle		Info / Angle
	4		4
	5		5
	6		6
	Audio		Audio / Lang I/II
	7		7
	8		8
	9		9
	Osd		Display / Media
	Time		Sleep / Timer
	10+		Guide / EPG / -/--

Originalfernbedienung Ersatzfernbedienung

	0		0
	PS/IS		Smart / List
	Title		Sound / Title
	Prog		TV/Radio /
	Clear		Exit / Cancel / Clear
	Setup		Setup / OPT /
	Up		Up
	Left		Left
	Ok		OK
	Right		Right
	Down		Down
	Return		Back / Return
	Menu		Menu / Home
	Pbc		Picture / Format
	<<		<< / Tune-
	Pause		Pause / Step / Freeze
	Play		Play / Slow



