 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Tv/TXT		Text
	Play/Pause/Cancel		Play
	<</Hold		<<
	>>/Size		>>
	I<</Subpage		I<<
	>>I/Index		>>I
	INput		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	0		0
	REP/Reveal		Smart
	Recall		Pre Ch
	-/--		Shift + Guide
	Right		Right
	Left		Left
	Up		Up
	Down		Down
	OK		Ok
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Menu		Menu
	Exit		Exit
	Mute		Mute
	Nicam/A2		Dual



