


 
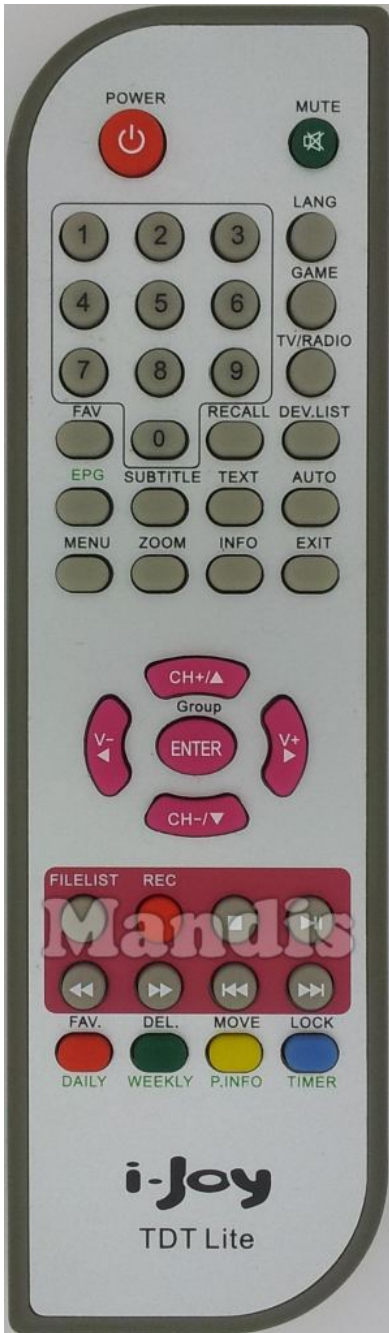 

Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Lang		Dual
	Game		Smart
	Tv/Radio		TV/R
	FAV	 + 	Shift + Pre Ch
	Recall		Pre Ch

Originalfernbedienung Ersatzfernbedienung

	Dev.List		Media
	EPG		Guide
	Subtitle		Subt
	Text		Text
	Auto		Options
	Menu		Menu
	Zoom		Eject
	Info		Info
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +





Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol -
	Filelist		AV
	Rec		Rec
	Stop		Stop
	Play		Play
	Pause		Pause
	<<		<<
	>>		>>
	<<		<<
	>>		>>
	Red/FAV./Daily		Red
	Green/Del./Weekl		Green
	Yellow/Movie/P.Inf		Yellow
	Blue/Lock/Timer		Blue

Originalfernbedienung Ersatzfernbedienung

