



 

 
 
 








 

 
 
 

 













Originalfernbedienung Ersatzfernbedienung


 
 





 

 
 
 

 
 
 


 
 
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV/ZAPP		Pre Ch
	TXT		Text
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Originalfernbedienung Ersatzfernbedienung

	Exit/TV-G		Exit
	?		Smart
	@		Media
	Menu/i		Menu
	Back		Back
	Tools		Options
	Guide		Guide
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Vol+		Vol +
	Vol-		Vol -
	PR+		Ch +
	PR-		Ch -
	AV		AV





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Mute		Mute
	I<		I<<
	>I		>>I
	<<		<<<
	>>		>>>
	Rec		Rec
	Play		Play
	Pause		Pause
	Stop		Stop
	3D/Search		Format
	..O/Audio		Dual
	[...].		Subt
	PIP/ECO		3D
	My Media/CEC		TV/R

