



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Media		Display / Media
	Mute		Mute / Dimmer
	Still		Pause / Step / Freeze
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Info		Info / Angle
	0		0
	Previous		Back / Return
	Red		Red / Netflix / Search







 


 

 

 


 


 

 

 

Originalfernbedienung Ersatzfernbedienung

	Blue		Blue / Prime Video / Random
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Aspect		Shift + Picture / Format
	O/O/I/I		Audio / Lang I/II
	Menu		Menu / Home
	Source		AV / Input / RDS
	Exit		Exit / Cancel / Clear
	Up		Up
	PR+		CH+ / Page+
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Vol+		Vol+
	PR-		CH- / Page-
	Vol-		Vol-





Originalfernbedienung Ersatzfernbedienung

	Picture		Picture / Format
	Sound		Sound / Title
	Text		Text / Goto
	HDMI	 + 	Shift + 0
	VGA	 + 	Shift + 4
	Guide/Zoom		Zoom / Size
	Guide/Zoom		Guide / EPG / -/--
	Index/Subtitle		Subtitle / EQ
	Sleep/Hold		Sleep / Timer
	Sleep/Hold		Stop / Hold
	Lang/Cancel	 + 	Shift + Exit / Cancel / Clear
	Lang/Cancel	 + 	Shift + Audio / Lang I/II
	FAV/Sub.code		Fav / Marker / PC
	TV/Reveal		Smart / List
	Comp./Mix		Setup / OPT /

Originalfernbedienung Ersatzfernbedienung

