

 
 





 

 







 

 









 
 

 

 

 


 










Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Display		Info
	Sleep		Sleep
	Prog		Shift + Sleep
	Random		Subt
	Repeat		Text
	Sound Mode		Dual
	Auto Preset		TV/R
	FM Mode		Blue
	Eject CD		Pre Ch
	AUX		Red
	FM/AM		Green
	Tape <>		Yellow
	Play CD		Play
	Pause CD		Pause
	Stop		Stop
	>>		>>

Originalfernbedienung Ersatzfernbedienung

	I<<		I<<
	Cancel		Back
	< Multikey		Left
	Multikey >		Right
	Set		Menu
	Display Mode		3D
	PTY/EON		Format
	AHB PRO		AV
	Vol-		Vol -
	Vol+		Vol +

