









 
 

 
 

 


 





 


 
 
 

 




 
 

 
 





 

 
 
 

 
 
 


 
 
 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Power Tv	 + 	Shift + Power
	Input Tv		AV
	Open/Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Audio		Dual
	Subtitle		Subt
	Vol+		Vol +

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol -
	♥		Pre Ch
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Top Menu	 + 	Shift + Menu
	Pop Up/Menu		Menu
	Return		Back
	Options		Options
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Home		Smart
	I<<		I<<





Originalfernbedienung Ersatzfernbedienung

	>>I		>>I
	Pause		Pause
	<<		<<
	>>		>>
	Play		Play
	Stop		Stop
	Display		Info
	SEN		TV/R

Originalfernbedienung Ersatzfernbedienung

