 
 
 
 


 
 
 

 



 

 

 


 
 

 
 
 

 


 
 





Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Teletex		TEXT
	Red		Red (A)
	Green/[] Smart		Green (B)
	Yellow/Smart		Yellow (C)
	Blue		Blue (D)
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		EXIT


 
 

 

Originalfernbedienung Ersatzfernbedienung

	Timer		-/-- / EPG
	Menu		MENU
	Mute		MUTE
	P<P		P/C / FAV
	OK		OK
	Up		UP
	Down		DOWN
	Right		RIGHT
	Left		LEFT
	P+		CH +
	P-		CH -
	Vol+		VOL +
	Vol-		VOL -
	Play		Play
	Stop		Stop
	Record/OTR		Rec
	<<		Rewind





Originalfernbedienung Ersatzfernbedienung

	>>		Fast Forward
	> /Index		Last
	> </Still		Pause

Originalfernbedienung Ersatzfernbedienung

