 

 

 
 
 
 

 


 
 

 
 

 

 

 

 

 
 
 

 
 
 



 

 
 
 
 
 
 
 

 
 


 
 
 

 

 


 

 

 





Originalfernbedienung Ersatzfernbedienung

	Standby/On		Power
	Open/Close		Eject
	Audio(O))		Dual
	Subtitle/[...]		Subt
	Angle/Camera		Options
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Enter		Ok
	Clear		Exit

 


Originalfernbedienung Ersatzfernbedienung

	Menu		Menu
	Top Menu		Shift + Menu
	Home Menu		Media
	Return		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Play		Play
	Stop		Stop
	Pause		Pause
	I<<		I<<
	>>I		>>I
	<</I/<I		<<
	II>/I>/>>		>>
	Zoom		Shift + Eject
	Display		Info





Originalfernbedienung    Ersatzfernbedienung

	Surround	 + 	Shift + Dual
	Play Mode		TV/R

Originalfernbedienung    Ersatzfernbedienung