

 

 
 


 

 


 

 
 



 

 



 

 

 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		Smart
	List		List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV		AV
	FAV		Pre Ch
	Menu		Menu
	Exit		Exit

Originalfernbedienung Ersatzfernbedienung

	Guide		Guide
	Return		Back
	Info		Info
	Presets		Format
	Up		Up
	Down		Down
	Right/Zoom+		Right
	Left/Zoom-		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	PR+		Ch +
	PR-		Ch -
	Red(O) Lang		Red
	Green/Subtitles		Green
	Yellow		Yellow








 
 
 

 

 
 
 
 
 



 
 
 
 

 


 




Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Blue		Blue
	Text/Violet		Text
	Stop Text		Dual
	??? Text		Subt
	Zoom Text		Eject
	Media/Digital		Media
	T-Link		TV/R
	<<		<<
	Play		Play
	>>		>>
	Rec		Rec
	Stop		Stop
	Pause		Pause







Originalfernbedienung Ersatzfernbedienung

 




	Power		Power
	AV		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	List		List
	Menu		Menu
	Exit		Exit
	OK		Ok
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Down		Down
	Right/Zoom+		Right
	Left/Zoom-		Left
	Return		Back
	Guide		Guide
	Info		Info
	Mute		Mute
	Presets		Format
	PR+		Ch +
	PR-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Red(O) Lang		Red
	Green/Subtitles		Green
	Yellow		Yellow
	Blue		Blue
	Text/Violet		Text





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Play		Play				
	Stop		Stop				
	Rec		Rec				
	Pause		Pause				
	>>		>>				
	<<		<<				

