



Originalfernbedienung Ersatzfernbedienung

	POWER		On
	POWER		OFF
	FAV (STAR)		-- / USB
	COMP. 1		4 / VGA1
	COMP. 2		5 / VGA2
	HDMI		9 / HDMI
	AUTO SYNC.		Auto / Mode
	SOURCE		SRC / Search
	K.S. UP		KS Up
	UP		Up
	K.S. DOWN		KS Down
	DOWN		Down
	LEFT		Left
	RIGHT		Right
	ENTER		OK
	MENU		Menu / Info
	EXIT		Exit / Lamp


Originalfernbedienung Ersatzfernbedienung

	PAGE UP		Shift + Vol +
	PAGE DOWN		Shift + Vol -
	MOUSE		2
	PATTERN		1 / Point
	BLANK		Hide / Blank
	LOCK / ID set		Aspect / Re-Sync
	MUTE		Mute / Focus
	1		Shift + 1 / Point
	2		Shift + 2
	HELP		Shift + Menu /
	3		Shift + 3
	TIMER		0 / Lan
	VOL+		Vol +
	4		Shift + 4 / VGA1
	5		Shift + 5 / VGA2
	ZOOM		Pict / Freeze
	ECO MODE		Shift + Auto / Mode





Originalfernbedienung Ersatzfernbedienung

	6	 +  COMP	Shift + 6 / Comp
	VOL-		Vol -
	7	 +  S-VID	Shift + 7 / S-Vid
	8	 +  VIDEO	Shift + 8 / Video
	COLOR MODE		K.S. / PIP

Originalfernbedienung Ersatzfernbedienung

