






















 

















Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------|---|--------------------|
|  | Mute |  | Mute / Dimmer |
|  | Power |  | Power |
|  | PP |  | Back / Return |
|  | I-II |  | Audio / Lang I/II |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | -- |  | Guide / EPG / -/-- |
|  | P<P |  | Fav / Marker / PC |
|  | Menu |  | Menu / Home |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|-----------------------------|
|  | Info |  | Info / Angle |
|  | Left |  | Left |
|  | Up |  | Up |
|  | P+ |  | CH+ / Page+ |
|  | Right |  | Right |
|  | Down |  | Down |
|  | P- |  | CH- / Page- |
|  | Vol- |  | Vol- |
|  | Vol+ |  | Vol+ |
|  | Red/Sound |  | Red / Netflix / Search |
|  | Red/Sound |  | Sound / Title |
|  | Green/Picture |  | Green / APP / Repeat |
|  | Green/Picture |  | Picture / Format |
|  | Yellow/Feature |  | Yellow / YouTube / Repeat |
|  | Blue/Install |  | Blue / Prime Video / Random |
|  | TV |  | TV/Radio / |
|  | AV |  | AV / Input / RDS |



