



**Originalfernbedienung    Ersatzfernbedienung**

	Source	 + 	Shift + AV / Input / RDS
	Power		Power
	List		Smart / List
	TV	 + 	Shift + 1
	DVD	 + 	Shift + 2
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	AV		AV / Input / RDS
	0/--	 + 	Shift + Guide / EPG / -/-
	FAV		Fav / Marker / PC



 

 








 

 

 

 




 







**Originalfernbedienung    Ersatzfernbedienung**

	Exit		Exit / Cancel / Clear
	Menu		Menu / Home
	Up		Up
	Left/Zoom-		Left
	OK		OK
	Right/Zoom+		Right
	Down		Down
	Guide		Guide / EPG / -/-
	Return		Back / Return
	Info		Info / Angle
	Vol+		Vol+
	Presets		Setup / OPT /
	PR+		CH+ / Page+
	Vol-		Vol-
	PR-		CH- / Page-
	Mute		Mute / Dimmer
	Red/O Lang		Red / Netflix / Search





**Originalfernbedienung**    **Ersatzfernbedienung**





 




 

 

 

 


 


 





 Red/O) Lang	 Audio / Lang I/II
 Green/Subtitles	 Subtitle / EQ
 Green/Subtitles	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Violet/Text	 Text / Goto
 Stop Text	 Shift + Stop /
 ??? Text	 Sleep / Timer
 Zoom Text	 Zoom / Size
 Media/Digital	 Display / Media
 <<<	 <<< / Tune-
 Play	 Play / Slow
 >>>	 >>> / Tune+
 T-Link	 D.Menu / Top
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze

**Originalfernbedienung**    **Ersatzfernbedienung**




 

 


 

 


 




 


 

 








**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	List		Smart / List
	TV		Shift + 1
	DVD		Shift + 2
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	AV		AV / Input / RDS
	0/--		Shift + Guide / EPG / -/--
	Exit		Exit / Cancel / Clear
	Menu		Menu / Home

**Originalfernbedienung    Ersatzfernbedienung**

	Up		Up
	Left/Zoom-		Left
	OK		OK
	Right/Zoom+		Right
	Down		Down
	Guide		Guide / EPG / -/--
	Return		Back / Return
	Info		Info / Angle
	Vol+ Tv		Vol+
	Presets		Setup / OPT /
	PR+		CH+ / Page+
	Vol- Tv		Vol-
	PR-		CH- / Page-
	Mute Tv		Mute / Dimmer
	Red(O) Lang		Audio / Lang I/II
	Red(O) Lang		Red / Netflix / Search
	Subtitles		Subtitle / EQ





Originalfernbedienung Ersatzfernbedienung

	Green/Subtitles		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Violet/Text		Text / Goto
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze

Originalfernbedienung Ersatzfernbedienung







**Originalfernbedienung   Ersatzfernbedienung**

	Source / Eject		Eject / Surround
	Power		Power
	List		Smart / List
	TV		Shift + 1
	DVD		Shift + 2
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	AV		AV / Input / RDS
	0 / --		Shift + Guide / EPG / -/-
	FAV		Fav / Marker / PC

**Originalfernbedienung   Ersatzfernbedienung**

	Exit		Exit / Cancel / Clear
	Menu		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Guide		Guide / EPG / -/-
	Return		Back / Return
	Info		Info / Angle
	Vol +		Vol+
	PR +		CH+ / Page+
	Vol -		Vol-
	PR -		CH- / Page-
	Mute		Mute / Dimmer
	Red / A-B		Shift + Yellow / YouTube /
	Red / A-B		Red / Netflix / Search





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Green / Subtitles	 APP	Green / APP / Repeat				
	Green / Subtitles	 EQ	Subtitle / EQ				
	Yellow / Size	 YouTube	Yellow / YouTube / Repeat				
	Yellow / Size	 ZOOM	Zoom / Size				
	Blue / Lang	 Prime Video	Blue / Prime Video / Random				
	Blue / Lang	 LANG I/II	Audio / Lang I/II				
	Purple / Text	 GOTO	Text / Goto				
	Text Stop	 + 	Shift + Stop /				
	Text ???	 SLEEP	Sleep / Timer				
	Text Zoom	 + 	Shift + Zoom /				
	<<		<< / Tune-				
	Play		Play / Slow				
	>>		>> / Tune+				
	Stop		Stop / Hold				
	Pause		Pause / Step / Freeze				

