



Originalfernbedienung Ersatzfernbedienung



 

 







 

 

 

 

 





 









	Source	 + 	Shift + AV / Input / RDS
	Power		Power
	List		Smart / List
	TV	 + 	Shift + 1
	DVD	 + 	Shift + 2
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	AV		AV / Input / RDS
	0/--	 + 	Shift + Guide / EPG / -/-
	FAV		Fav / Marker / PC

Originalfernbedienung Ersatzfernbedienung

	Exit		Exit / Cancel / Clear
	Menu		Menu / Home
	Up		Up
	Left/Zoom-		Left
	OK		OK
	Right/Zoom+		Right
	Down		Down
	Guide		Guide / EPG / -/-
	Return		Back / Return
	Info		Info / Angle
	Vol+		Vol+
	Presets		Setup / OPT /
	PR+		CH+ / Page+
	Vol-		Vol-
	PR-		CH- / Page-
	Mute		Mute / Dimmer
	Red/O Lang		Red / Netflix / Search




Originalfernbedienung Ersatzfernbedienung







 



 

 

 

 

 


 

 

 


 
 



	Red/O) Lang		Audio / Lang I/II
	Green/Subtitles		Subtitle / EQ
	Green/Subtitles		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Violet/Text		Text / Goto
	Stop Text		Shift +
	??? Text		Stop /
	Zoom Text		Sleep / Timer
	Zoom Text		Zoom / Size
	Media/Digital		Display / Media
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	T-Link		D.Menu / Top
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze

Originalfernbedienung Ersatzfernbedienung


 





 

 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	List		Smart / List
	TV		Shift + 1
	DVD		Shift + 2
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	AV		AV / Input / RDS
	0/--		Shift + Guide / EPG / -/--
	Exit		Exit / Cancel / Clear
	Menu		Menu / Home

 



















Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Left/Zoom-		Left
	OK		OK
	Right/Zoom+		Right
	Down		Down
	Guide		Guide / EPG / -/--
	Return		Back / Return
	Info		Info / Angle
	Vol+ Tv		Vol+
	Presets		Setup / OPT /
	PR+		CH+ / Page+
	Vol- Tv		Vol-
	PR-		CH- / Page-
	Mute Tv		Mute / Dimmer
	Red(O) Lang		Audio / Lang I/II
	Red(O) Lang		Red / Netflix / Search
	Subtitles		Subtitle / EQ





Originalfernbedienung Ersatzfernbedienung

	Green/Subtitles		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Violet/Text		Text / Goto
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze

Originalfernbedienung Ersatzfernbedienung






Originalfernbedienung Ersatzfernbedienung

	Source / Eject		Eject / Surround
	Power		Power
	List		Smart / List
	TV		Shift + 1
	DVD		Shift + 2
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	AV		AV / Input / RDS
	0 / --		Shift + Guide / EPG / -/-
	FAV		Fav / Marker / PC

Originalfernbedienung Ersatzfernbedienung

	Exit		Exit / Cancel / Clear
	Menu		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Guide		Guide / EPG / -/-
	Return		Back / Return
	Info		Info / Angle
	Vol +		Vol+
	PR +		CH+ / Page+
	Vol -		Vol-
	PR -		CH- / Page-
	Mute		Mute / Dimmer
	Red / A-B		Shift + Yellow / YouTube /
	Red / A-B		Red / Netflix / Search





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Subtitles	Green / Subtitles		Green / APP / Repeat
 Subtitles	Green / Subtitles		Subtitle / EQ
 Yellow / Size	Yellow / Size		Yellow / YouTube / Repeat
 Yellow / Size	Yellow / Size		Zoom / Size
 Blue / Lang	Blue / Lang		Blue / Prime Video / Random
 Blue / Lang	Blue / Lang		Audio / Lang I/II
 TEXT	Purple / Text		Text / Goto
 STOP	Text Stop		Shift + Stop /
 ???	Text ???		Sleep / Timer
 ZOOM	Text Zoom		Shift + Zoom /
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze

