






 

 









 

 








 
 










 



 

 
 
 







 

 
 
 
 

 
 




Originalfernbedienung Ersatzfernbedienung

	Standby/On		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv/DVD		TV/R
	Open/Close		Eject
	DTV/Analog		Smart
	Input Sel		AV
	Copy		Options
	Pause		Pause

 
 




 
 

 
 
 
 


 

 

 

 

 
 
 







 
Originalfernbedienung Ersatzfernbedienung

	I<<		I<<
	>>I		>>I
	Play		Play
	Stop		Stop
	<<		<<
	>>		>>
	Mute		Mute
	Prog+		Ch +
	Prog-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Menu		Menu
	Return		Back
	Exit		Exit
	Title List/Disc Menu		Media
	Play List/Title Menu		Shift + Menu
	Red		Red





Originalfernbedienung Ersatzfernbedienung





 

 











 

 



 

 



 
 


	Green		Green
	Yellow		Yellow
	Blue		Blue
	Guide		Guide
	Info		Info
	Subtitle		Subt
	Text		Text
	Tv/Radio		Sleep
	FAV List		Pre Ch
	Marker		Shift + Options
	Rec		Rec
	Audio		Dual
	Rec Mode		Shift + Rec
	Rec		Format
	Repeat		Shift + Text
	OK		Ok
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Down		Down
	Right		Right
	Left		Left
	USB		Shift + Media
	Timer		Shift + AV
	HDD		Shift + Smart







 

 



 

 


 
 
 

 















Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Input Sel		AV				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Prog+		Ch +				
	Prog-		Ch -				
	Standby/On TV		Power				
	Mute Tv		Mute				
	Tv Vol+		Vol +				
	Tv Vol-		Vol -				






 


 

 
 
 
 

 



 

 
 

 
 
 


 

 






Originalfernbedienung Ersatzfernbedienung

	Standby/On		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv/DVD		TV/R
	Open/Close		Eject
	DTV/Analog		Smart
	Input Sel		AV
	Copy		Options
	Pause		Pause



 


 


 




Originalfernbedienung Ersatzfernbedienung

	<<		<<
	>>		>>
	Play		Play
	Stop		Stop
	<<		<<
	>>		>>
	Prog+		Ch +
	Prog-		Ch -
	Menu		Menu
	Return		Back
	Exit		Exit
	Title List/Disc Menu		Media
	Play List/Title Menu		Shift + Menu
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue


 


 





Originalfernbedienung Ersatzfernbedienung

	Guide		Guide
	Info		Info
	Subtitle		Subt
	Text		Text
	Tv/Radio		D. Menu
	FAV List		Pre Ch
	Marker		Shift + Options
	Rec		Rec
	Audio		Dual
	Rec Mode		Shift + Rec
	Rec		Format
	Repeat		Shift + Text
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left

Originalfernbedienung Ersatzfernbedienung

	USB		Shift + Media
	Timer		Shift + AV
	HDD		Shift + Smart

