





 











 

































Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	O)/Lang		Audio / Lang I/II
	Subt.		Subtitle / EQ
	Zoom		Zoom / Size
	*		Setup / OPT /
	Text		Text / Goto
	Source		AV / Input / RDS
	Home		Menu / Home
	Up		Up
	[i]		Info / Angle
	Left		Left










 


 







 
 
Originalfernbedienung Ersatzfernbedienung

	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	PRE-CH		Back / Return
	Vol+		Vol+
	List		Smart / List
	P+		CH+ / Page+
	Vol-		Vol-
	P-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7





Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	Guide		Guide / EPG / -/--
	0		0
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	≡		Shift + Text /
	←		Shift + Left
	Netflix		Shift + Red / Netflix /

Originalfernbedienung Ersatzfernbedienung

