



**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Home		Menu / Home
	Guide		Guide / EPG / /-/-
	UP		Up
	I<		I<< / Preset-
	Left		Left
	OK		OK
	Right		Right
	>I		>>I / Preset+
	Down		Down
	Back		Back / Return
	Option		Setup / OPT /
	III		Smart / List
	Vol+		Vol+
	Mute		Mute / Dimmer
	Vol-		Vol-
	Red		Red / Netflix / Search

**Originalfernbedienung    Ersatzfernbedienung**

	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	[...]		Subtitle / EQ
	0		0
	[I<>I]		Picture / Format

