 
 
 




 

 
 

 





















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	USB		TV/R
	Angle		Options
	Open/Close		Eject
	Timer		Shift + AV
	Rec Mode		Shift + Rec
	Repeat		Text
	Repeat A-B		Shift + Text
	Disc		D. Menu
	Setup		Menu
	Back		Back
	Info		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left

 
 
 

 
 
 


 

 
 
 



 
Originalfernbedienung Ersatzfernbedienung

	OK		Ok
	<</REW		Green
	>>/FFW		Blue
	</Prev		I<<
	>/I/Next		I>>
	Play/Pause		Play
	Rec		Rec
	Stop		Stop
	Vol+ Tv		Vol +
	Vol- Tv		Vol -
	Mute TV		Mute
	PR+		Ch +
	PR-		Ch -
	1		1
	2		2
	3		3
	4		4





Originalfernbedienung Ersatzfernbedienung

	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Subtitle		Subt
	Audio		Dual
	Shuffle		Pre Ch
	Zoom		Shift + Eject
	Clear		Exit
	Time Search		Sleep

Originalfernbedienung Ersatzfernbedienung