 





Originalfernbedienung Ersatzfernbedienung

|   |                |   |         |
|---|----------------|---|---------|
|    | Standby/On     |    | Power   |
|    | Open/Close     |    | Eject   |
|    | Audio/O))      |    | Dual    |
|    | Subtitle/[...] |    | Subt    |
|    | Angle/Camera   |    | Options |
|    | 1              |    | 1       |
|    | 2              |    | 2       |
|    | 3              |    | 3       |
|    | 4              |    | 4       |
|    | 5              |    | 5       |
|    | 6              |    | 6       |
|   | 7              |   | 7       |
|  | 8              |  | 8       |
|  | 9              |  | 9       |
|  | 0              |  | 0       |
|  | Clear          |  | Exit    |
|  | Enter          |  | Ok      |

Originalfernbedienung Ersatzfernbedienung

|   |           |   |              |
|---|-----------|---|--------------|
|    | Top Menu  |    | Shift + Menu |
|    | Menu      |    | Menu         |
|    | Return    |    | Back         |
|    | Setup     |    | Text         |
|    | Up        |    | Up           |
|    | Down      |    | Down         |
|    | Right     |    | Right        |
|    | Left      |    | Left         |
|    | Play      |    | Play         |
|    | Enter     |    | Shift + Ok   |
|    | <</ </ << |    | <<           |
|   | >/ >/>>   |   | >>           |
|  | <<        |  | <<           |
|  | Pause     |  | Pause        |
|  | Stop      |  | Stop         |
|  | >>        |  | >>           |
|  | Play Mode |  | TV/R         |



