


 








 




 


 

 

 
 
 
 

 

 
 







 
 






Originalfernbedienung	Ersatzfernbedienung
 Power	 Power
 Mute	 Mute
 Vol+	 Vol +
 Vol-	 Vol -
 P+	 Ch +
 P-	 Ch -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 PP	 Pre Ch

Originalfernbedienung	Ersatzfernbedienung
 [ +]	 Info
 -/Y	 Left
 +/>>I	 Right
 Menu	 Menu
 Smart	 Smart

