

 



 
 





 
 
 



 

 


 

 





 






 




 

 
 


 

 

 

 
 


 

 

 





**Originalfernbedienung Ersatzfernbedienung**

	Standby		Power
	Open/Close		Eject
	Angle		Format
	Info/Display		Info
	Q-Play/Tv/Radio		TV/R
	PN/EPG		Guide
	Search/TTX		Text
	PBC/List		List
	Subtitle		Subt
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

**Originalfernbedienung Ersatzfernbedienung**

	9		9
	0		0
	Random		D. Menu
	Audio		Dual
	Vol+		Vol +
	Vol-		Vol -
	Stop		Stop
	Play		Play
	Pause		Pause
	Prev		I<<
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Next		>>I
	Rew		<<
	FF		>>





Originalfernbedienung Ersatzfernbedienung

	Setup		Options
	Return		Back
	Up/CH+		Up
	Down/CH-		Down
	Right		Right
	Left		Left
	Enter		Ok
	Title/Pg Up		Ch +
	Menu/Pg Dn		Ch -
	Zoom		Shift + Eject
	Repeat		Shift + Text
	FAV/A-B		Pre Ch
	Exit/Slow		Exit
	Video		AV
	USB		Smart
	DVD/DVB		Media
	Mute		Mute

Originalfernbedienung Ersatzfernbedienung