 



 

 

 


 

 



 




Originalfernbedienung Ersatzfernbedienung

	On		Power
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Stop		Stop
	Play		Play
	Pause		Pause
	I<<		I<<
	>>I		>>I
	Record		Rec
	Open/Close		Eject
	Disc Skip		Guide
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	EQ		Red

Originalfernbedienung Ersatzfernbedienung

	B.Boost		Green
	Band		Yellow
	FM ST		Blue
	Source		AV
	CD Info		Info
	Prog		Shift + Sleep
	Intro/CT		Ok
	Repeat/RDS		Text
	PTY		Media
	ADD		Dual
	DEL		Exit
	Clock		Options
	Timer		Shift + AV
	Sleep		Sleep

