




 
 
 



 
 



 



 
 







 





 
 



 

 



 

 


 





 




 

 
 
 

 

 

 

 





 
 


Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	Mute		Mute
	Tuner		Red
	DVD		Green
	USB		Yellow
	iPod		Blue
	P-EQ		Text
	OSD/DIM		3D
	Mode		TV/R
	Program		D. Menu
	Title		Info
	Subtitle		Subt
	Zoom		Eject
	Audio		Dual
	Setup		Options
	Menu		Menu
	Clock		AV
	Sleep/Timer		Sleep
	Up		Up
	Down		Down
	>>		>>
	<<		<<
	Enter		Ok
	+		Right
	-		Left
	>>		>>
	<<		<<
	Play		Play
	Pause		Pause
	Stop		Stop
	Goto		Pre Ch
	1		1
	2		2
	3		3





Originalfernbedienung Ersatzfernbedienung

	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -

Originalfernbedienung Ersatzfernbedienung

