 
 

 
 

 

 







Originalfernbedienung Ersatzfernbedienung

	Input/Tuner	 + 	Shift + AV / Input / RDS
	Open/Close		Eject / Surround
	Standby		Power
	BT Audio	 + 	Shift + 9
	Optical		Setup / OPT /
	Display		Display / Media
	Home Menu	 + 	Shift + Menu /
	Menu		Menu / Home
	Up		Up
	Preset Up	 + 	Shift + >>I / Preset+
	Left/Tune-		Left
	Enter		OK
	Right/Tune+		Right
	Down		Down
	Preset Down	 + 	Shift + I<< / Preset-
	Return		Back / Return
	PopUp/Top		Smart / List



 

 

 



 









 



 

 

 

 



Originalfernbedienung Ersatzfernbedienung

	Stop		Stop / Hold
	Play		Play / Slow
	Pause/Step		Pause / Step / Freeze
	I<<		I<< / Preset-
	<<		<< / Tune-
	>>		>> / Tune+
	>>I		>>I / Preset+
	SKP Level		D.Menu / Top
	SKP Level	 + 	Shift + D.Menu / Top Menu
	Vol+		Vol+
	USB Rec	 + 	Shift + 8
	Mute		Mute / Dimmer
	Vol-		Vol-
	Sound		Sound / Title
	1		1
	2		2
	3		3

 

 
 







Originalfernbedienung Ersatzfernbedienung

	Marker		Fav / Marker / PC
	4		4
	5		5
	6		6
	Search		Shift + Red / Netflix /
	7		7
	8		8
	9		9
	Repeat		Green / APP / Repeat
	Dimmer		Shift + Mute / Dimmer
	0		0
	Zoom		Zoom / Size
	Clear		Exit / Cancel / Clear
	Red/RDS		Red / Netflix / Search
	Yellow/PTY Search		Yellow / YouTube / Repeat
	Blue/ST/Mono		Blue / Prime Video / Random
	Power Tv		Shift + Power

Originalfernbedienung Ersatzfernbedienung

	PR+ Tv		CH+ / Page+
	Vol+ Tv		Shift + Vol+
	AV/Input Tv		AV / Input / RDS
	PR- Tv		CH- / Page-
	Vol- Tv		Shift + Vol-
	Sleep		Sleep / Timer

