



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PREV.CH		Pre Ch
	.		Guide
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -

Originalfernbedienung Ersatzfernbedienung

	CH+		Ch +
	CH-		Ch -
	Menu		Menu
	Back		Back
	Info		Info
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	SAP		Media
	Mode/Auto		Options
	Freeze		Pause
	Sleep		Sleep
	Format		Format

