
 
 

 













 

 
















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Tv/Text		Text
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV/Input Select		AV
	-/--		Guide
	Vol+		Vol +
	Vol-		Vol -
	Tracking/V-Lock+		Ch +



 








 









 

 






 



Originalfernbedienung Ersatzfernbedienung

	Tracking/V-Lock-		Ch -
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Prog/Check+		Shift + 1
	Prog/Check-		Shift + 4
	Date+		Shift + 2
	Date-		Shift + 5
	On+		Shift + 3
	On-		Shift + 6
	Off+		Shift + 9
	Off-		Shift + Pre Ch





 


 




















 






**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Tv/Text		Text
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	AV/Input Select		AV
	Tracking/V-Lock+		Ch +
	Tracking/V-Lock-		Ch -
	Vol+		Vol +


**Originalfernbedienung    Ersatzfernbedienung**

	Vol-		Vol -
	Replay		Options
	OSD/Display		Info
	Search		TV/R
	Showview		Media
	Direct Tv Rec		Smart
	I<< Index		I<<
	Index >>I		>>I
	Rec		Rec
	Pause/Step		Pause
	Play		Play
	Stop		Stop
	>>		>>
	<<		<<
	OK		Ok
	Up		Up
	Down		Down







**Originalfernbedienung    Ersatzfernbedienung**

	Right		Right
	Left		Left
	Menu		Menu
	Exit		Exit
	Prog+/Red		Shift + 1
	Prog-		Shift + 4
	Date+/Green		Shift + 2
	Date-		Shift + 5
	On+/Yellow		Shift + 3
	On-		Shift + 6
	Off+/Blue		Shift + 9
	Off-		Shift + Pre Ch
	Prog/Check		Red
	Cancel		Back
	Timer Rec		Format
	Reset		Pre Ch
	VPS/PDC		Green

**Originalfernbedienung    Ersatzfernbedienung**

	AV Link		Yellow
	Tv Aspect		3D
	Nothing 1		Dual
	Nothing 2		Subt
	Nothing 3		Blue

