





 


 
 
 







 




 



 
 
 



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Tv/AV		AV
	?		Smart
	Mute		Mute
	0		0
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Guide
	Lock		Pre Ch
	Zoom		Eject



Originalfernbedienung Ersatzfernbedienung

	Hold		Subt
	→IPI←		Format
	Mix		Media
	Text		Text
	Subcode		Options
	QV		TV/R
	→ISI←		Dual
	Cancel		Exit
	Reveal		Back
	Yellow/Timer		Yellow
	Blue/Sound		Blue
	Red/Picture		Red
	Green/Clock		Green
	Up		Up
	Down		Down
	Right		Right
	Left		Left





Originalfernbedienung Ersatzfernbedienung

	OK		Ok
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	M		Menu

Originalfernbedienung Ersatzfernbedienung

