



**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Tv/AV		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide
	Eject		Eject
	Play/Pause		Play
	Stop		Stop
	Return		Back




 

 

 













 

 

 


 
**Originalfernbedienung Ersatzfernbedienung**

	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	Up		Up
	CH+		Ch +
	CH-		Ch -
	Down		Down
	Right		Right
	Left		Left
	Sys Menu		Menu
	Display		Shift + Info
	OK		Ok
	Picture		Format
	Sound		Dual
	Timer		Shift + AV
	Nicam/A2		Media
	Lan/Prog-		Shift + Ch -







**Originalfernbedienung    Ersatzfernbedienung**

	Zoom/Prog+		Shift + Ch +
	Sub		Subt
	Goto		Options
	SET/Tv/TXT/DVB-		Text
	ANG/Reveal/Exit		Exit
	Menu/Cancel/Tv Format		D. Menu
	Title/info		Info
	<</Hold/Languag		<<
	>>/Size/Text		>>
	I<</Subpage		I<<
	FAV		Pre Ch
	>>I/Index		>>I
	EPG		Guide
	Red/Pro		Red
	Tv/Radio		TV/R
	Green/Slow/Audio		Green
	Yellow/Rep/Freeze		Yellow

**Originalfernbedienung    Ersatzfernbedienung**

	Blue/A-B/Subtitle		Blue

