


Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Power Tv	+	Shift + Power
	Eject/Open-Close		Eject / Surround
	AV Tv	+	Shift + AV / Input / RDS
	1		1
	2		2
	3		3
	PR/TRK+	+	Shift + CH+ /
	PR+ Tv		CH+ / Page+
	4		4
	5		5
	6		6
	PR/TRK-	+	Shift + CH- /
	PR- Tv		CH- / Page-
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung



	Vol+ Tv		Vol+
	Tv/VCR		TV/Radio /
	0		0
	AV		AV / Input / RDS
	Vol- Tv		Vol-
	<</Backward		<< / Tune-
	>>/Forward		>> / Tune+
	I<< Skip		I<< / Preset-
	Skip >>I		>>I / Preset+
	Pause/Step		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	Display/CLK/CN		Display / Media
	Up		Up
	i/Setup		Info / Angle
	Left		Left
	OK/Enter		OK




Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Disc Menu		D.Menu / Top
	Down		Down
	Return		Back / Return
	O)/Audio		Audio / Lang I/II
	[...]/Subtitle		Subtitle / EQ
	Camera/Angle		Shift + Info / Angle
	Zoom		Zoom / Size
	Rec/ITR		Rec / Rec Mode
	Lock		Shift + Exit / Cancel / Clear
	Title		Sound / Title
	Program		Shift + TV/Radio / Program
	Marker		Fav / Marker / PC
	Search		Red / Netflix / Search
	Clear		Exit / Cancel / Clear
	Repeat		Green / APP / Repeat
	A-B/LP		Yellow / YouTube / Repeat

Originalfernbedienung Ersatzfernbedienung

	Random/CM		Smart / List




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Power Tv		Shift + Power
	Eject/Open-Close		Eject / Surround
	AV Tv		Shift + AV / Input / RDS
	1		1
	2		2
	3		3
	PR/TRK+		Shift + CH+ /
	PR+ Tv		CH+ / Page+
	4		4
	5		5
	6		6
	PR/TRK-		Shift + CH- /
	PR- Tv		CH- / Page-
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	Vol+ Tv		Vol+
	Tv7VCR		TV/Radio /
	0		0
	AV		AV / Input / RDS
	Vol- Tv		Vol-
	<</Backward		<< / Tune-
	>>/Forward		>> / Tune+
	I<< Skip		I<< / Preset-
	Skip >>I		>>I / Preset+
	Pause/Step		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	Display/CLK/CN		Display / Media
	Up		Up
	i/Setup		Info / Angle
	Left		Left
	K/Enter		OK







Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Disc Menu		D.Menu / Top
	Down		Down
	Return		Back / Return
	O)/Audio		Audio / Lang I/II
	[...]/Subtitle		Subtitle / EQ
	Camera/Angle		Shift + Info / Angle
	Zoom		Zoom / Size
	Rec/ITR		Rec / Rec Mode
	Lock		Shift + Exit / Cancel / Clear
	Title		Sound / Title
	Program		Shift + TV/Radio / Program
	Marker		Fav / Marker / PC
	Search		Red / Netflix / Search
	Clear		Exit / Cancel / Clear
	Repeat		Green / APP / Repeat
	A-B/LP		Yellow / YouTube / Repeat

Originalfernbedienung Ersatzfernbedienung

	Random/CM		Smart / List

