


 

 

 

 

 

 

 



 

 







 







 
 


 
 
 
 

 
 
 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide
	Recall		Pre Ch
	Info		Info
	EPG		Guide
	Source		AV



 







 
 






 




Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol +
	Vol-		Vol -
	Prog+		Ch +
	Prog-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Sleep		Sleep
	Menu		Menu
	FAV		Shift + Pre Ch
	Format		Format
	Text		Text
	Subtitle		Subt
	Red/Size		Red
	Green/Reveal		Green

 
 
 





Originalfernbedienung Ersatzfernbedienung

	Yellow/Index		Yellow
	Blue/Hold		Blue
	DVD Lang		Dual
	Step		3D
	Play		Play
	Pause		Pause
	Stop		Stop
	I<</Previous		I<<
	>>I/Next		>>I
	<</FR		<<
	>>/FF/MTS		>>
	Open/Close		Eject
	Prog		Shift + Sleep
	Zoom		Shift + Eject
	Title		Back
	DVD Setup		Options
	DVD Menu		D. Menu

Originalfernbedienung Ersatzfernbedienung

	Repeat		Shift + Text
	A-B		TV/R

