 



 
 
 
 
 

 
 
 
 

 
 
 

 
 
 
 
 
 
 
 
 
 

 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	<<		<<
	>>		>>
	I<<		I<<
	>>I		>>I
	Pause/Step		Pause
	Stop		Stop
	Play		Play
	Top Menu		Shift + Menu
	Menu		Menu
	Clear		Exit
	Back		Back
	Ok		Ok
	Up		Up
	Down		Down
	Right		Right

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	Angle		Format
	Subtitle		Subt
	Audio		Dual
	Setup		Options
	Display		Info
	Zoom		Shift + Eject
	Slow		AV
	E.A.M		Text
	E.P.M.		Media
	FL Select		List
	FL Dim		3D
	1		1
	2		2
	3		3
	4		4
	5		5



