




 

 







 








 

 

 
 
 
 













 






 

 
 


 
 

 
 
 

 






Originalfernbedienung Ersatzfernbedienung


 





 









 
 
 


 

 
 





	Eject		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide
	Key Up		Ch +
	Key Down		Ch -
	Zoom		Shift + Eject
	Display		Info
	Echo Up		Shift + Ch +

Originalfernbedienung Ersatzfernbedienung

	Echo Down		Shift + Ch -
	Vol+		Vol +
	Vol-		Vol -
	Enter		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Setup		Options
	Mute		Mute
	Clear		Exit
	Prog		Sleep
	Subtitle		Subt
	Language		Dual
	Title-Return		Back
	A-B		TV/R
	Pause		Pause





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Play		Play
	Stop		Stop
	<<		<<
	>>		>>
	<<		<<
	>>		>>
	Angle		Red
	Time	 +  Shift + AV	
	Repeat		Text
	Karaoke		Power
	PBC		Smart
	R/L		3D
	N/P		AV
	Step		Media
	Slow		Yellow

