




 

 


 
 

 

 
 
 



 
 
 
 
 
 
 


 
 
 

 
 




 

 



 
 
 

 
 






 
 
 
 




Originalfernbedienung Ersatzfernbedienung

|   |                |   |            |
|---|----------------|---|------------|
|    | Power          |    | Power      |
|    | Open/Close VCR |    | Pre Ch     |
|    | Open/Close     |    | Guide      |
|    | DVD/VCR        |    | Media      |
|    | Input Select   |   | Shift + AV |
|    | Display        |    | Info       |
|    | 1              |    | 1          |
|    | 2              |    | 2          |
|    | 3              |    | 3          |
|    | 4              |    | 4          |
|   | 5              |   | 5          |
|  | 6              |  | 6          |
|  | 7              |  | 7          |
|  | 8              |  | 8          |
|  | 9              |  | 9          |
|  | 0              |  | 0          |
|  | Up             |  | Up         |

Originalfernbedienung Ersatzfernbedienung

|   |                  |   |              |
|---|------------------|---|--------------|
|    | Down             |    | Down         |
|    | Right            |    | Right        |
|    | Left             |    | Left         |
|    | Enter            |    | Ok           |
|    | P+               |    | Ch +         |
|    | P-               |    | Ch -         |
|    | TRK+             |    | Vol +        |
|    | TRK-             |    | Vol -        |
|    | Setup            |    | Options      |
|    | Cancel           |    | Exit         |
|   | Return           |   | Back         |
|  | Title Menu/Top   |  | Menu         |
|  | DVD Menu         |  | D. Menu      |
|  | One Touch        |  | Green        |
|  | Repeat A-B       |  | Text         |
|  | Play Mode/Repeat |  | Shift + Play |
|  | Zoom             |  | Eject        |



