















 


 








 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Guide		Guide / EPG / -/--
	3D		Eject / Surround
	Ambilight		Display / Media
	Source		AV / Input / RDS
	TV		TV/Radio /
	[<>]/Format		Picture / Format
	Home		Menu / Home
	Smart Tv		Smart / List
	≡/List		Shift + Smart / List
	[i]/Info		Info / Angle

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	III/Options		Setup / OPT /
	Back		Back / Return
	CH-		CH- / Page-
	CH+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer
	Vol+		Vol+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random





Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Subtitle		Subtitle / EQ
	0		0
	[≡]/Text		Text / Goto

Originalfernbedienung Ersatzfernbedienung