 

 



 




 



 

 





 

 

 

 




 

 


 


















 


 
 








Originalfernbedienung Ersatzfernbedienung

	Power Xbox		Power
	Power Tv	 + 	Shift + Power
	World		Media
	Yellow/Y		Yellow
	Blue/X		Blue
	Green/A		Green
	Red/B		Red
	Play		Play
	Pause		Pause
	>>		>>
	<<		<<
	I<		I<<
	>I		>>I
	Menu		Menu
	Info		Info
	Rec		Rec
	OK		Ok

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Guide		Guide
	Back		Back
	Vol+		Vol +
	Vol-		Vol -
	CH/PG+		Ch +
	CH/PG-		Ch -
	Mute		Mute
	Last		Pre Ch
	Line Tv		TV/R
	Input		AV
	Disp		List
	1		1
	2		2





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
3	3	3	3				
4	4	4	4				
5	5	5	5				
6	6	6	6				
7	7	7	7				
8	8	8	8				
9	9	9	9				
0	0	0	0				

