 



 

 

 

 


 















 






 
 




 








 









 
 


 

 




Originalfernbedienung Ersatzfernbedienung

|   |            |   |       |
|---|------------|---|-------|
|    | Power      |    | Power |
|    | Source     |    | AV    |
|    | P+         |    | Ch +  |
|    | P-         |    | Ch -  |
|    | Vol+       |    | Vol + |
|    | Vol-       |    | Vol - |
|    | I-II/Audio |    | Dual  |
|    | Mute       |    | Mute  |
|    | OK         |    | Ok    |
|    | Up         |    | Up    |
|   | Down       |   | Down  |
|  | Right      |  | Right |
|  | Left       |  | Left  |
|  | Text       |  | Text  |
|  | Sleep      |  | Sleep |
|  | Tv Menu    |  | Menu  |
|  | Exit       |  | Exit  |

Originalfernbedienung Ersatzfernbedienung

|   |              |   |         |
|---|--------------|---|---------|
|    | 1            |    | 1       |
|    | 2            |    | 2       |
|    | 3            |    | 3       |
|    | 4            |    | 4       |
|    | 5            |    | 5       |
|    | 6            |    | 6       |
|    | 7            |    | 7       |
|    | 8            |    | 8       |
|    | 9            |    | 9       |
|    | 0/10         |    | 0       |
|   | List/+10     |   | List    |
|  | Back/Program |  | Back    |
|  | Tv/Radio     |  | TV/R    |
|  | FAV          |  | Pre Ch  |
|  | EPG          |  | Guide   |
|  | Setup        |  | Options |
|  | DVD Menu     |  | D. Menu |





Originalfernbedienung Ersatzfernbedienung

|              |                 |                     |               |
|--------------|-----------------|---------------------|---------------|
| REPEAT       | Repeat          | SHIFT + REPEAT TEXT | Shift + Text  |
| SMODE        | S.Mode          | SHIFT + SOUND DUAL  | Shift + Dual  |
| P.MODE       | P.Mode          | PICTURE FORMAT      | Format        |
| INFO         | Info            | DISPLAY INFO        | Info          |
| SIZE ZOOM    | Zoom/Size       | SHIFT + ZOOM        | Shift + Eject |
| SUBTITLE     | Subtitle        | AD SUBT             | Subt          |
| REVEAL D.DIS | D.Dis/Reveal    | HOME SMART          | Smart         |
| CANCEL SLOW  | Slow/Cancel     | ECO 3D              | 3D            |
| INDEX A-B    | A-B/Index       | APP MEDIA           | Media         |
| [Red]        | Red             | A                   | Red           |
| [Green]      | Green           | B                   | Green         |
| [Yellow]     | Yellow          | C                   | Yellow        |
| [Blue]       | Blue            | D                   | Blue          |
| HOLD II/▶    | Play            | PLAY MODE           | Play          |
| MIX          | Stop/Mix        | ■                   | Stop          |
| SUBPAGE      | Open/Close/Subp | ZOOM                | Eject         |
| HOLD II/▶    | Pause/Hold      |                     | Pause         |

Originalfernbedienung Ersatzfernbedienung

|                     |       |                      |                 |
|---------------------|-------|----------------------|-----------------|
| [Fast Forward]      | >>    | [Fast Forward]       | >>              |
| [Fast Reverse]      | <<    | [Fast Reverse]       | <<              |
| [Half Fast Forward] | <<    | [Half Fast Forward]  | <<              |
| [Half Fast Reverse] | >>    | [Half Fast Reverse]  | >>              |
| ANGLE               | Angle | SHIFT + SETTINGS OPT | Shift + Options |
| GOTO                | Goto  | SHIFT + RETURN BACK  | Shift + Back    |
| STEP                | Step  | SHIFT + AD SUBT      | Shift + Subt    |
|                     |       |                      |                 |
|                     |       |                      |                 |
|                     |       |                      |                 |
|                     |       |                      |                 |
|                     |       |                      |                 |
|                     |       |                      |                 |
|                     |       |                      |                 |
|                     |       |                      |                 |
|                     |       |                      |                 |
|                     |       |                      |                 |
|                     |       |                      |                 |
|                     |       |                      |                 |
|                     |       |                      |                 |

