




 


 
 

 





 

 



 



 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	CBL/SAT		1
	DVD		2
	Blu-ray		3
	Game		4
	AUX		5
	Media Player		6
	USB		7
	TV Audio		8
	Tuner		9
	Bluetooth		Guide
	Internet Radio		Pre Ch
	Mute		Mute
	CH/Page+		Ch +
	CH/Page-		Ch -

Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol +
	Vol-		Vol -
	Eco		3D
	Info		Info
	Option		Options
	Back		Back
	Setup		Menu
	Enter		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Play		Play
	Pause		Pause
	I<</Tune-		I<<
	>>I/Tune+		>>I
	Green/Movie		Green





Originalfernbedienung Ersatzfernbedienung






 


 
 

 





 

 



 


 





	Red/Music		Red
	Blue/Game		Blue
	Yellow/Pure		Yellow
	Quick Select 1		D. Menu
	Quick Select 2		Text
	Quick Select 3		Eject
	Quick Select 4		AV

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	CBL/SAT		1
	DVD		2
	Blu-ray		3
	Game		4
	AUX		5
	Media Player		6
	USB		7
	TV Audio		8
	Tuner		9
	Bluetooth		Guide
	Internet Radio		Pre Ch
	CH/Page+		Ch +
	CH/Page-		Ch -
	Vol+		Vol +

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol -
	Mute		Mute
	Back		Back
	Enter		Ok
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	Play		Play
	Pause		Pause
	I<</Tune-		I<<
	>>I/Tune+		>>I
	Quick Select 1		D. Menu
	Quick Select 4		AV
	Quick Select 3		Eject
	Quick Select 2		Text

