




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	DVB/DVD		Smart
	Audio		Dual
	Clear/Media		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PBC/Menu		Menu
	10+		Pre Ch

Originalfernbedienung Ersatzfernbedienung

	SUB/MP3		Subt
	EPG/Program		Guide
	Setup		Options
	Enter		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	CH+		Ch +
	CH-		Ch -
	I>/Step		Pause
	Stop/Rec		Stop
	Play/Pause		Play









Originalfernbedienung Ersatzfernbedienung

	<<		<<
	>>		>>
	I<<		I<<
	>>I		>>I
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	TXT/Repeat		Text
	Display		Info
	Search/Scan		Shift + TV/R
	A-B/Tv/R		TV/R
	Digest/HD/Res.		AV
	Return		Back
	Zoom		Shift + Eject
	V-Mode		Format
	N/P		D. Menu
	Slow		Exit

Originalfernbedienung Ersatzfernbedienung

	Angle		3D
	Title		List

