








 



 









 

 

 



 
 










 
 

 


 
 


 


 



 
 





 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	Sleep		Sleep
	Picture Mode		Format
	Sound Mode		Shift + Dual
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[<>]/Aspect		3D
	Guide		Guide






 

 
 



 



 
 
 





 
 


 
Originalfernbedienung Ersatzfernbedienung

	Back		Back
	Eco		Shift + 3D
	Menu		Menu
	i		Info
	Audio		Dual
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	P+		Ch +
	P-		Ch -
	Red		Red
	Green		Green





Originalfernbedienung Ersatzfernbedienung

	Yellow		Yellow
	Blue		Blue
	Fun-Link		Media
	[...]		Subt
	[≡◆]		D. Menu
	[≡o]		Smart
	[≡+]		Options
	[≡]		Text
	[≡?]		TV/R
	[≡i]		List
	Play		Play
	Pause		Pause
	Stop		Stop
	>>		>>
	<<		<<
	>>		>>
	<<		<<

Originalfernbedienung Ersatzfernbedienung

