

 
 
 

 

 
 
 
 
 
 
 
 
 

 

 
 
 
 
 

 


 
 
 
 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit
	Repeat		Text
	Menu Disc		Menu
	Menu/Info		Info
	Home		Smart

Originalfernbedienung Ersatzfernbedienung

	Title/popup		Media
	Back		Back
	Enter		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Play		Play
	Stop		Stop
	Pause		Pause
	<<		<<
	>>		>>
	<<		<<
	>>		>>
	Subtitle		Subt
	Red		Red
	Green		Green



